



Simplicity

user guide



The Simplicity chair is a multi-positional Care Chair which means it can be adjusted in many different ways to help find an individual position for the occupant to give comfort and support.

The following features and adjustment descriptions give a simple guide to using the Simplicity Care Chair.

Contents

- 1** Tilt in Space
- 2** Leg Rest Operation.
- 3** Articulating Back
- 4** Legrest Starting Position
- 5** Footplate Height Adjustment and Removal
- 6** Footplate Angle Adjustment
- 7** Footplate Fold Away
- 8** Arm Removal
- 9** Seat Width Adjustment/ Arm Rest Removal
- 10** Removable Seat Cushion Module
- 11** Thoracic Width, Angle and Height Adjustment
- 12** Rear Castor Braking

1. Tilt in Space



Manual operation
Pull lever and tilt chair. The lever has a safety catch which must be released before squeezing the lever.

2. Leg Rest Operation



Manual Leg rest operation is a two handed operation. The release trigger must be squeezed as the leg rest is pulled outwards to extend it.

3. Articulating Back



There are two knobs on the back of the chair which allow the carer to change the angle of the upper part of the backrest to give more head support or allow for a kyphotic curvature of the spine.

4. Leg Rest Starting Position



The leg rest gas spring can be positioned at different start points to allow a higher leg rest or a negative angle start. The pin shown in the pictures is easily repositioned.



5. Footplate Height Adjustment and Removal

To adjust the height of the footplate the index plunger pin needs to be pulled out and the footplate can be positioned higher or lower in line with the next set of holes.

Footplate removal requires two hands to pull the index plunger out and then slide the footplate out of the leg rest mechanism.



6. Footplate Angle Adjustment

The angle of the footplate can be adjusted using the chromed dome bolts highlighted. It is possible to adjust the angle from -10 degrees to +20 degrees



7. Footplate Fold Away



The footplate can be stored in front of the leg rest.

8. Arm Removal



 
The arms are removable vertically

9. Seat Width Adjustment / Arm Rest Removal

Arm rests come in different size pairs to achieve different seat widths, 400mm, 450mm and 500mm. To adjust the seat width by removing the arm rest and replacing with a different size, remove the retaining butterfly screws and slide the arm rest off.



10. Removable Seat Cushion

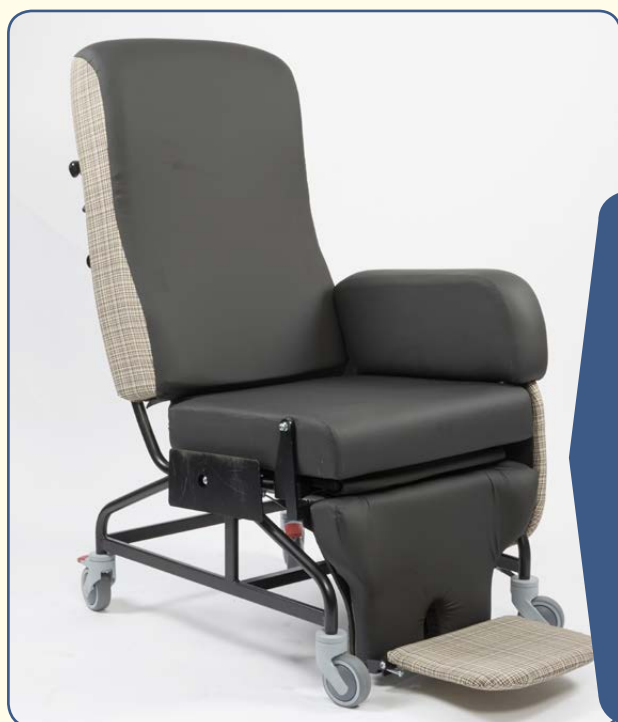

The seat module can be removed to allow the addition of other seat foam/gel/air cushion systems.

The cushion casing is secured to the seat with Velcro and can be repositioned giving some depth adjustment.

11. Thoracic Supports Width, Angle and Height Adjustment

The thoracic supports are locked in place with the large external knob. There are two support tubes.

By loosening the large knob the thoracic support can be positioned wider or at a different angle to suit the client's needs.



12. Rear Castor Braking



The rear locking castor is locked in the attached photograph. This is easily done with the carer's foot operating the brake lever.

It is advisable to lock the castors whenever the client is in the chair in a stationary position.

primacare
Seating Experts in Assistive Technology



Certificate no:11186 ISO9001